



Audio/Video Instructions

Audio/Music (Bluetooth)

- Turn on the Audio amplifier: press On/Off button



- When you see the message No Device!!, press the Mode button
- The Amplifier is now in Bluetooth mode
- Connect your phone/computer to Bluetooth device "RCS350-6"
- The screen indicates when successfully connected (you also hear a ping)



- Your music will be played through all indoor speakers
- You can control the volume on your phone or computer
- To control the music volume outside in the backyard, use Line 2 volume. By default, these speakers are turned off (volume 0).





Microphone

1. Turn on the Wireless Microphone receiver: press the power button until the green RF light turns on



2. Turn on the microphone: press the power button until the display lights up



3. The music volume automatically turns down when you talk in the microphone and restores to the original volume when not speaking.
4. When not using for a longer time, please turn the microphone off by pressing the power button until the display turns off



Video/Projector

1. Connect your computer to the projector

- We do not have a cable connection but use wireless HDMI to connect to the projector. For a good signal it's important that your computer is in the back part (between projector and rest rooms) of the reception hall.
- You either need a USB-C port or an HDMI & a regular USB port on your computer

Using USB C

- Use the USB-C dongle as shown below
- Plug the USB-C connector in your computer



Using HDMI and regular USB

- Unplug the HDMI and USB connector from the USB-C dongle and plug both in your computer



- Depending on the computer display settings your main display will be either shown on the projector or the projector will show your second screen





2. Configure on the projector

- Manually pull down the projector screen



- Turn on the projector: point the remote at the projector and press the power button
- Wait until you see the home screen

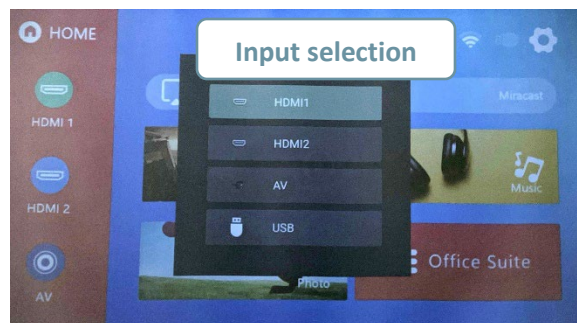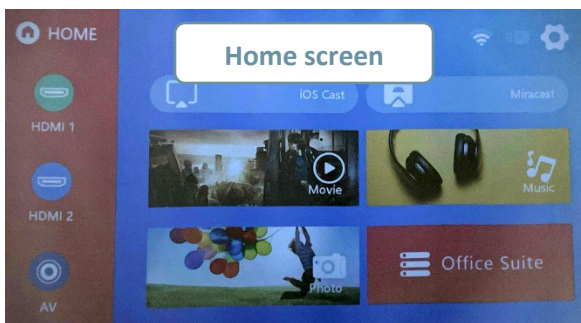

- Press the input button. When you see the Input selection menu, press OK (HDMI 1 should be selected)
- Wait a moment and your computer screen should be projected.
- If you see the message “No or weak signal”: check
 - Whether your computer is in the back part of the reception hall. The closer the computer is to the barn doors the stronger the signal will be
 - The HDMI dongle is correctly installed



Turn off all equipment

1. Turn off the projector: point the remote at the projector and press the power button. Press the power button again to turn off the projector
2. Turn off the microphone: press the power button until the display turns off
3. Turn off the microphone receiver: press the power button until the green RF light turns off
4. Turn off the outdoor speakers: turn Line 2 volume to 0 (all the way to the left)
5. Turn off the amplifier: press On/Off button